ZP3 Planner V3.1.8.0

The latest version of ZP3 Planner is available for download from

http://g2.dedicated.co.za/docs/Software/ZP3/Planner_V3.1.8.0.zip

TROUBLESHOOTING

Once installed, should you get the following "3.12 is not a valid floating point value" error when you try to go open Globals or IO mapping, then you need to change the "Decimal symbol" in your regional settings.



- 1. Search Region Settings and select Additional date, time and regional settings.
- 2. Click on Change date, time or number format under Regional
- 3. Click the button bottom right that says Additional Settings
- 4. In Decimal Symbol use the drop down box to select the decimial point "." rather than the comma
- 5. Apply

When you restart Planner Globals and IO Mapping will work without errors.



File Duto Edit Market Lite Water Lite Control Real Control Real Control Panel > Clock and Region Control Real Control Real Control Real Home System and Security System and Security Network and Internet Hardware and Sound Programs User Accounts Appearance and Personalisation • Clock and Region Control Africa) Ease of Access Control Africa) Date and time formats Short date: Short date: yyyy/MM//dd Long date: dddd, dd MMMM yyyy Short date: yyyy/MM//dd Long tate: Hartmass Long tate: Hartmass Long tate: Hartmass No. of digits after decimal: Digit grouping symbol: Digit grouping symbol: Digit grouping symbol: Long tate: Hartmass Long tate: Hartmass Long tate: Status			
Control Panel Home System and Security Network and Internet Hardware and Sound Programs User Accounts Appearance and Personalisation Control Region Language preferences Date and time of mats Short date: yyyy/MM/dd Long date: dddd, dd MMMM yyyy Short time: HH:mm Long date: dddd, dd MMMM yyyy Short time: HH:mm Long date: dddd, dd MMMM yyyy Short time: HH:mm Long time: HH:	~		
Control Panel > Clock and Region System and Security Network and Internet Hardware and Sound Programs User Accounts Appearance and Personalisation • Clock and Region Ease of Access Date and Time Set the time and date Change the time zone Add clocks for different time zones Personalisation • Clock and Region Ease of Access Date and Time Set the time and date Change the time zone Add clocks for different time zones Personalisation • Clock and Region Ease of Access Date and Time Set the time and date Change the time zone Add clocks for different time zones Personalisation • Clock and Region Ease of Access Date and time formats Short date: yyyy/MM/dd Long date: dddd, dd MMMM yyyy v Short time: HHmm Long time: HHmm Short date: yyyy/MM/dd Vog time: HHmm Short date: yyyy/MM/dd Short time: HHmm Short date: ywyy/MM/dd Short time: HHmm Short date: ywyy/MM/dd Sho			
Control Panel Home System and Security Network and Internet Hardware and Sound Programs User Accounts Appearance and Personalisation • Clock and Region Ease of Access Date and Time Set the time and date Change the time zone Add clocks for different time zones Pegion 2 Change date, time or number formats Personalisation • Clock and Region Ease of Access Date and time English (South Africa) Date and time formats Date and time formats Short date: yyyy/MM/dd Long date: dddd, dd MMMM yyyy Short time: Htmm Long time: Htmmss First day of week: Sunday Date and Time Set the time zone Add clocks for different time zones Comparison Comparis	P		
Appearance and Personalisation Format: • Clock and Region Format: Ease of Access English (South Africa) • Date and time formats • Date and time formats Short date: Short date: yyyy/MM/dd Long date: dddd, dd MMMM yyyy Short time: HH:mm Long time: HH:mmss First day of week: Sunday	×		
Ease of Access English (South Africa) Language preferences Date and time formats Short date: yyyy/MM/dd Long date: dddd, dd MMM yyyy Short time: HH:mm Long time: HH:mmss First day of week: Sunday	Vegative: -123 456 789,00		
Language preferences Date and time formats Short date: yyyy/MM/dd Long date: dddd, dd MMMM yyyy Short time: HH:mm Long time: HH:mms First day of week: Sunday			
Global Settings Examples Network Mode Standalone Panel Mode Standard Printer Type None Mains Power Enabled Battery Power Enabled Battery Power Enabled Display leading zeros: 0,7 V V Mains Power Enabled Battery Power Enabled Display leading zeros: 0,7 V V Mains Power Enabled Display leading zeros: 0 V Keither Display leading zeros: 0,7 V V Metric 0			
Address Group Verity Disabled Service Alarm Mode Enabled Update Time via Network Enabled Display Event Time Enabled Partial Short Check. Disabled Common Fire Relay Normal			

Image2: How to change Decimal Symbol in Windows 10