



Descriptions

VA-6000RM is used for remote control VA-6000 system, allowing remotely control for system voice message information and zones paging by users, it can drive 8 zones and extended zones or groups by Microphone Extension unit(VA-6000EM) to 64 zones, each can connect max 7 extension unit and every extension keyboard have 8 zones.

Features

- One press to select zones, which is simple and intuitive.
- Parallel transmission; extend the transmission distance by CAT-5.
- Obvious system fault and module status indicator.
- Supporting zones or groups extension.
- With line audio input and adjustable input volume.
- Paging button mode and PTT mode are all available.
- Supporting redundant wiring.
- DC 24V Phantom Power supply.

Basic Functions


- * Microphone output level is adjusted.
- * Ontrol priority right is available by VA-6000ST.
- st Build-in Hi-Fi monitor speaker, with monitor output.
- st One press into the paging status.
- st External Headphone jack; can monitor or record paging voice.

Specifications

Nodel	VA-6000RM
OC Supply	
/oltage	24V DC, ±20%
Max current	0.1A (not including extended panel)
Power dissipation	2.4W (not including extended panel)
Performance index	
Balance ipput	
Distortion	<1%, 1kHz
Frequency	80Hz~16kHz
Sensitivity	500mV
Impedance	10kΩ
Noise Ratio	>70dB
Line input	
Distortion	<1% (RMS), 1kHz
Frequency	80Hz~16kHz
Sensitivity	350mV
Output Impedance	10kΩ
SNR	>70dB
Mic	
Sensitivity	5mV
Output Impedance	600Ω
Mechanical Specifications	
Demension(L x W x D)	256 x 52 x 149mm
Weight	About 1.5kg
Installation	Desktop or 19 inch rack
Color	Balck
Environmental requirement	
Operation temp	+5°C ~ +40°C
Storage temp	-20°C ~ +70°C
Relative temp	<95% no condensation



VA-6000RM Front Panel <<

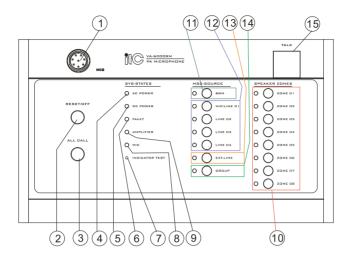


Connectors

- (1) Goose Mic Socket.
- (2) Fault reset/Zone closed.
- 3 Full zone selection.
- 4 The status indication of main power supply in the system:
- (1) Green Normal status of all the equipments and main power supply module in the system
- (2) Yellow Unusual status of any equipment or main power supply module in the system
- (5) The status indication of backup DC power supply in the system:
- (1) Off Normal status of all the equipments and backup power supply module in the system.
- (2) Yellow Unusual status of any equipment or main power supply module in the system.
- (6) Unusual status of any equipment or module in the system:
- (1) Off Normal status of all the equipments and modules.
- (2) Yellow on or flashing All the equipments or module of the system are in fault status.
- Testing button of the indicators on the panel: if this button is pressed, the indicators on the panel are on from green, red, to yellow, which means it is in normal status.
- 8 The status of the goose mic:

- (1) Off Goose mic is normal.
- (2) Yellow There is fault in the goose mic.
- (9) Working status of the amplifiers in the system:
- (1) Off All the amplifiers including backup amplifiers are working normally.
- (2) Yellow All/Any of the amplifiers including backup amplifiers have fault problem.
- 10 Zone working status indicator and selection button.
- (1) BGM control of the master unit:
- (1) Off Normal status.
- (2) Green Working status.
- (3) Yellow Fault.
- 12 Line input audio selection control button.
- (13) Goose mic and mic line input selection button.
- 14 Zone and zone function selection button.
- 15 Paging switch.

VA-6000RM Back Panel <<

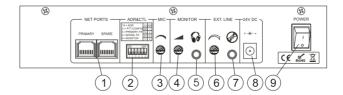

Connectors

- 1 Networking interface.
- ② Networking address and function configuration ("1,2" bits: Equipment address control; "3" bits: Configuration panel; "1,5": Paging button control mode-light touch or PPT mode; "4,5" bits: Main and backup units to connect the terminal resistance control; "6" bits: Local paging monitoring control).
- 3 PPT mic output volume adjusting.
- 4 Monitoring volume.
- (5) Monitoring audio output.
- 6 Line input volume adjusting.
- 7 Line audio input.
- 8 DC 24V input.
- Power Switching.